



# Installation instructions

for drywall applications - System F1

“non-removeable hatch”

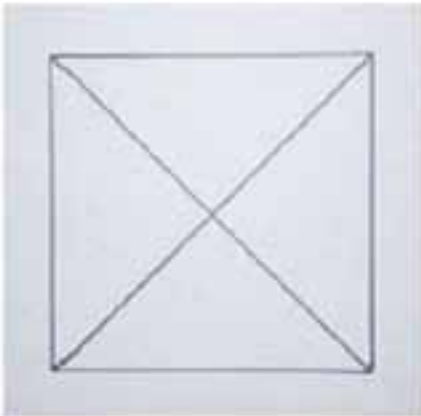

**Step 1:**  
Please measure the outer mounting frame and mark it on the plasterboard wall or drywall ceiling. ( 0.02 inch to the frame)

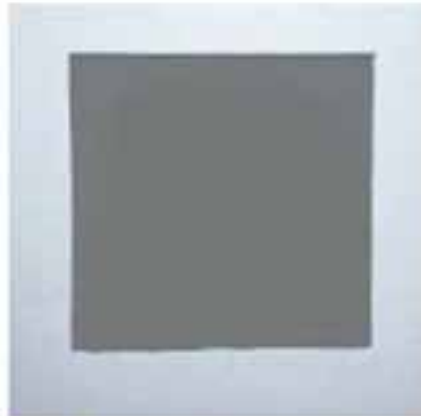

**Step 2:**  
Cut out the section.  
(recipitating saw, hand saw)



**Step 3:**  
Take the access panel and guide it through the opening towards the wall / ceiling void. Screw the outer mounting frame onto the plasterboard wall / ceiling by using 0.15 x 1.38 inch selfdrilling screws. Two or three times per side, depending on the dimensions.



**Step 4:**  
Now float out the void between the drywall and outer frame assembly with drywall spackle. Also fill in screw holes in drywall hatch, then sand the entire assembly smooth after allowing to dry. May need second coat.



**Step 5:**  
Now remove all excess spackle from all aluminium surfaces to ensure the proper function of the hatch.



**Step 6:**  
Hatch may now be painted.

**\*Note:** Paint hatch in open position and allow to dry before closing. Remove any wet paint from aluminium surfaces to insure proper operation.  
Then reinstall chain for safety!