


# Alu-Magic Installation instructions

for drywall applications - System F2 A

“removeable hatch”

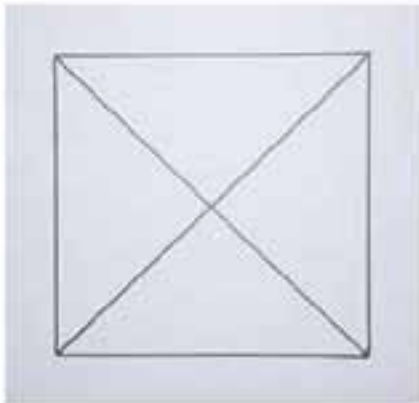

### Step 1:

Please measure the outer mounting frame and mark it on the plasterboard wall or drywall ceiling. ( 0.02 inch to the frame) (add 5 mm [ ~ 0.02 inch ])



### Step 2:

Cut out the section.  
(reciprocating saw, hand saw)



### Step 3:

Take the access panel and guide it through the opening towards the wall / ceiling void. Screw the outer mounting frame onto the plasterboard wall / ceiling by using 0.15 x 1.38 inch selfdrilling screws. Two or three times per side, depending on the dimensions.

**Smoothing the door leaf with filler is no longer necessary!**

**New!**



### Step 4:

Now float out the void between the drywall and outer frame assembly with drywall spackle. Also fill in screw holes in drywall hatch, then sand the entire assembly smooth after allowing to dry. May need second coat.



### Step 5:

Now remove all excess spackle from all aluminium surfaces to ensure the proper function of the hatch.



### Step 6:

Remove hatch and paint separately. Remove any wet paint from aluminum surfaces. Let dry before reinstalling.

**Note: Hatch must be numbered when removed to insure it's returned to it's original frame. Reinstall safety chains.**

**FF Systems**  
Access Panels

**PRO PRODUCTS**

P.O. Box 337406  
North Las Vegas, NV 89033  
Phone: 800.4642443 Fax: 888.464.2443

All products are available at <http://www.ProProductsSales.com>